


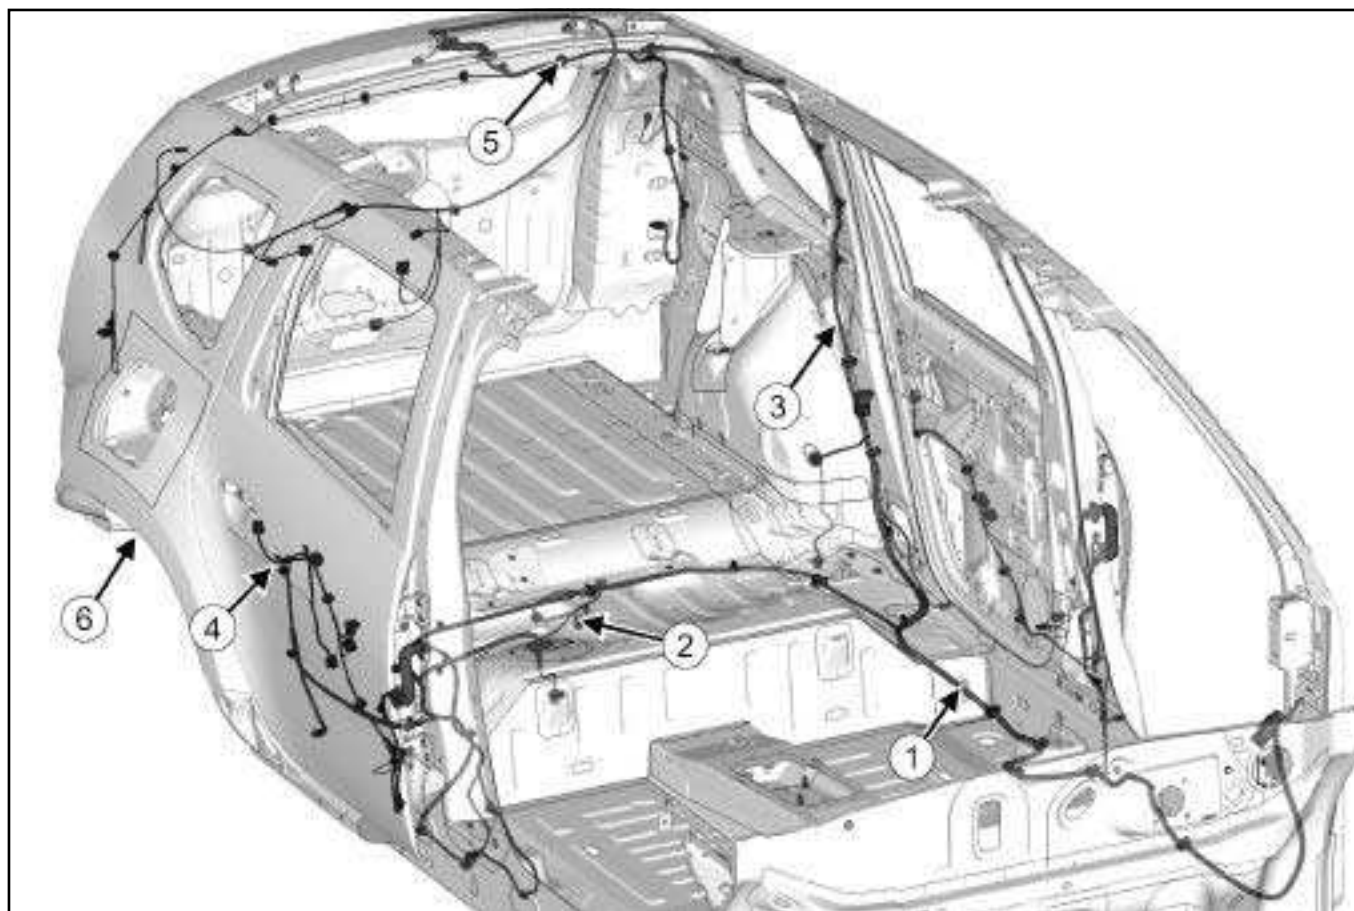

144400

- (1) Passenger compartment rear wiring section on the floor
- (2) Passenger compartment rear wiring section under the floor
- (3) Passenger compartment rear wiring section on the body
- (4) Passenger compartment rear wiring section in the rear doors
- (5) Passenger compartment rear wiring section in the tailgate
- (6) Passenger compartment rear wiring section in the wheel arches

REMOVAL

I - REMOVAL PREPARATION OPERATION

- ☐ Disconnect the battery (see **80A, Battery, Battery: Removal - Refitting**, page **80A-2**) (80A, Battery).

1 - Passenger compartment rear wiring section on the floor

- ☐ Remove:
 - the floor carpet (see **Roof trim assembly: Exploded view**) (71A, Body internal trim),
 - the B-pillar trim (see **Interior body side trim assembly: Exploded view**) (71A, Body internal trim).
- ☐ Lift up the rear bench seat base.

2 - Passenger compartment rear wiring section under the floor.

- ☐ Position the vehicle on a two-post lift (see **Vehicle: Towing and lifting**) (02A, Lifting equipment).
- ☐ Move the fuel tank away (see **Fuel tank: Removal - Refitting**) (19C, Tank).

3 - Passenger compartment rear wiring section on the body

- ☐ Remove (see **Interior body side trim assembly: Exploded view**) (71A, Body internal trim):
 - the C-pillar trims,
 - the parcel shelf side trims,

- the upper C-pillar trims,
- the luggage compartment side trims.

- ☐ Partially remove the headlining (see **Roof trim assembly: Exploded view**) (71A, Body internal trim).

4 - Passenger compartment rear wiring section in the rear doors

- ☐ Remove the rear side door trim (see **Rear side door trim: Removal - Refitting**) (72A, Side opening element trim).

5 - Passenger compartment rear wiring section in the tailgate


- ☐ Remove the tailgate trim (see) (73A, Non-side opening elements trim).

6 - Passenger compartment rear wiring section in the wheel arches

- ☐ Remove:
 - the rear wheels (see **Wheel: Removal - Refitting**) (35A, Wheels and tyres)
 - the ABS sensor cover.

II - REMOVAL OPERATION

1 - Passenger compartment rear wiring section on the floor

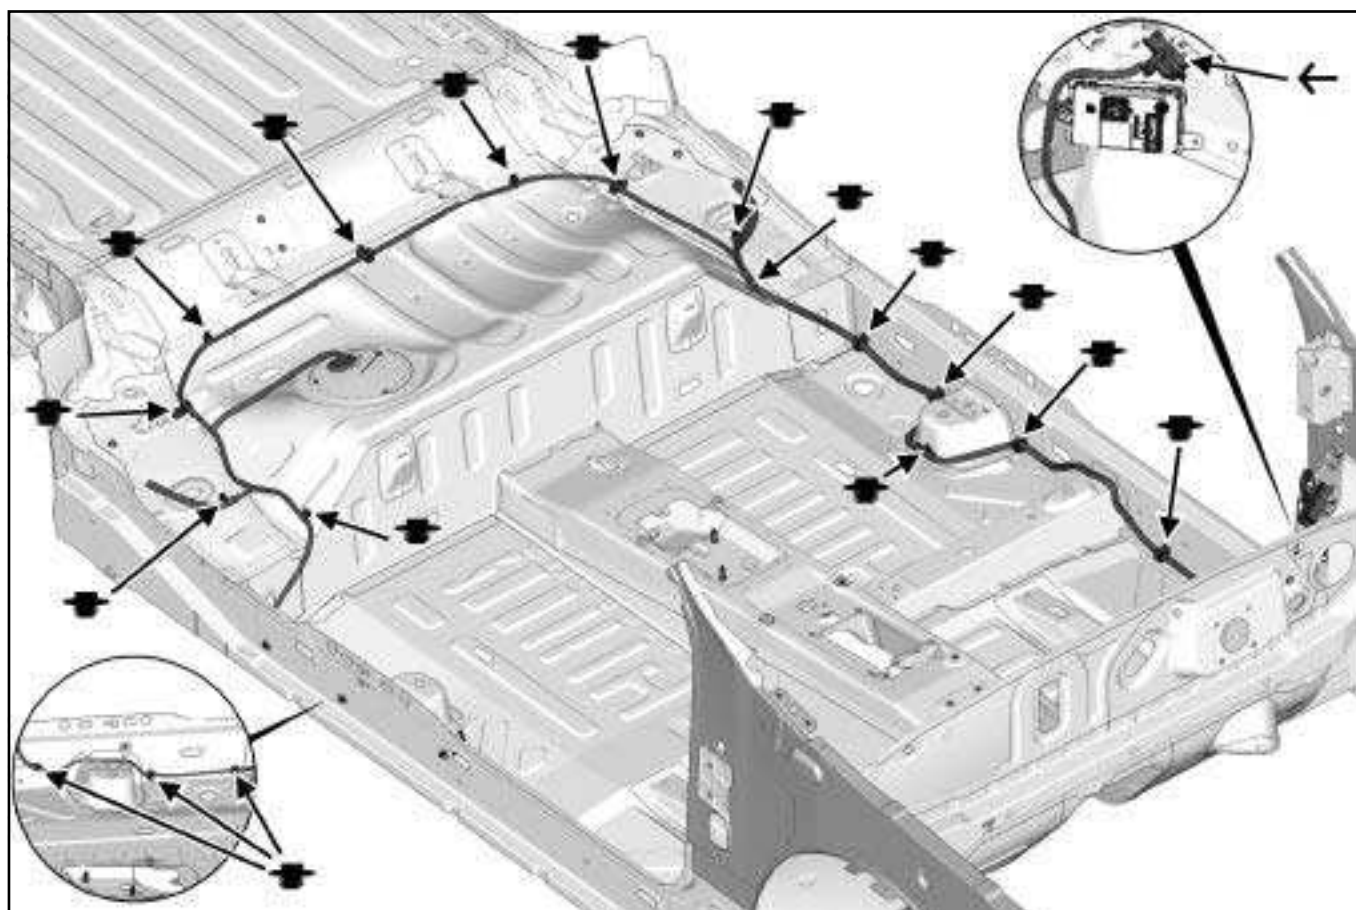


144401

- ☐ Disconnect all the connectors.
- ☐ Unclip the wiring section where indicated.
- ☐ Remove the earth terminals where indicated.
- ☐ Remove the wiring section.

3 - Passenger compartment rear wiring section on the body

Left-hand side

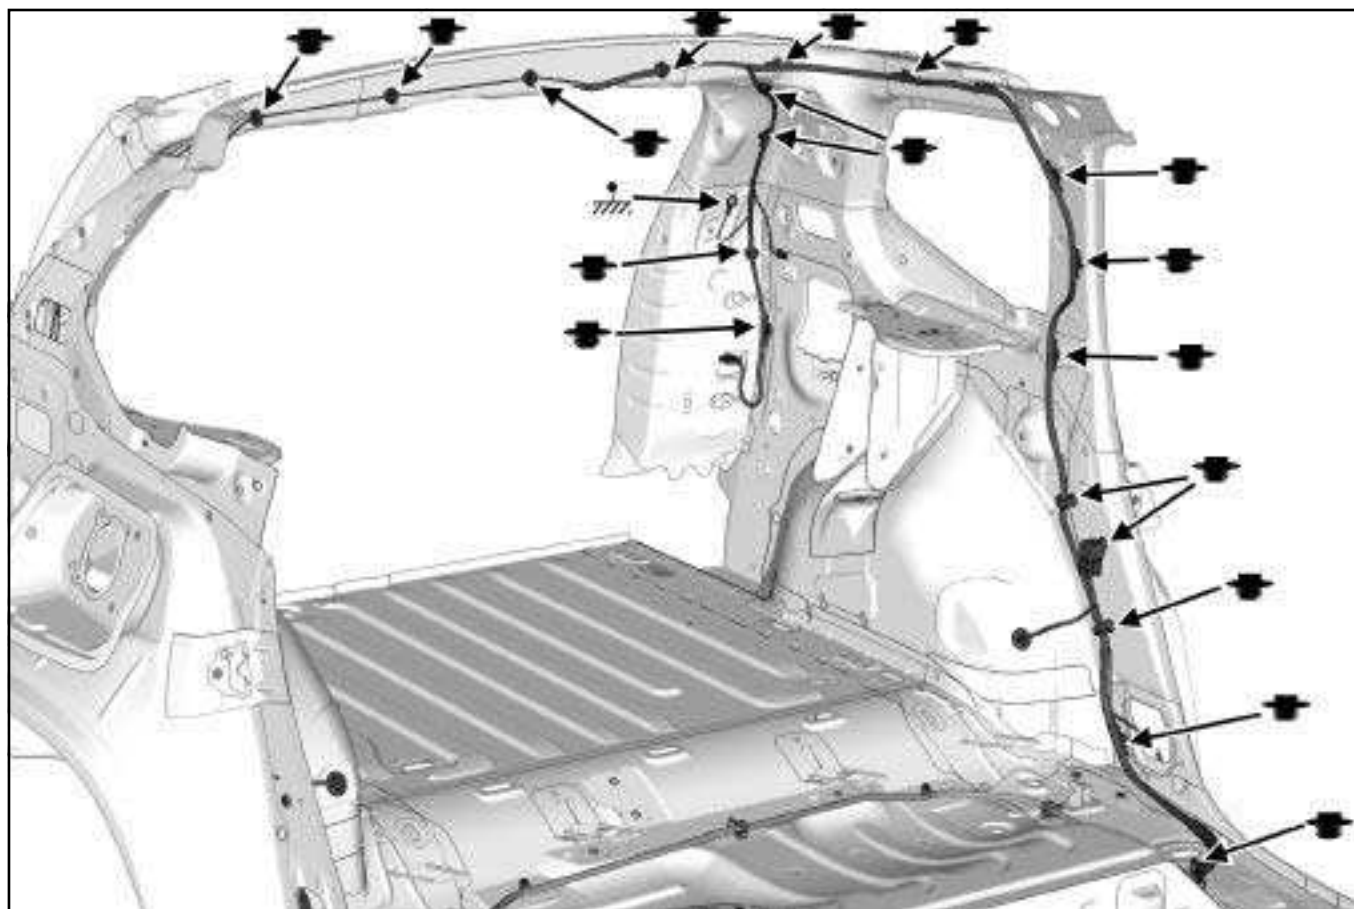


144404

WIRING HARNESS

Passenger compartment rear wiring: Removal - Refitting

88A

Right-hand side

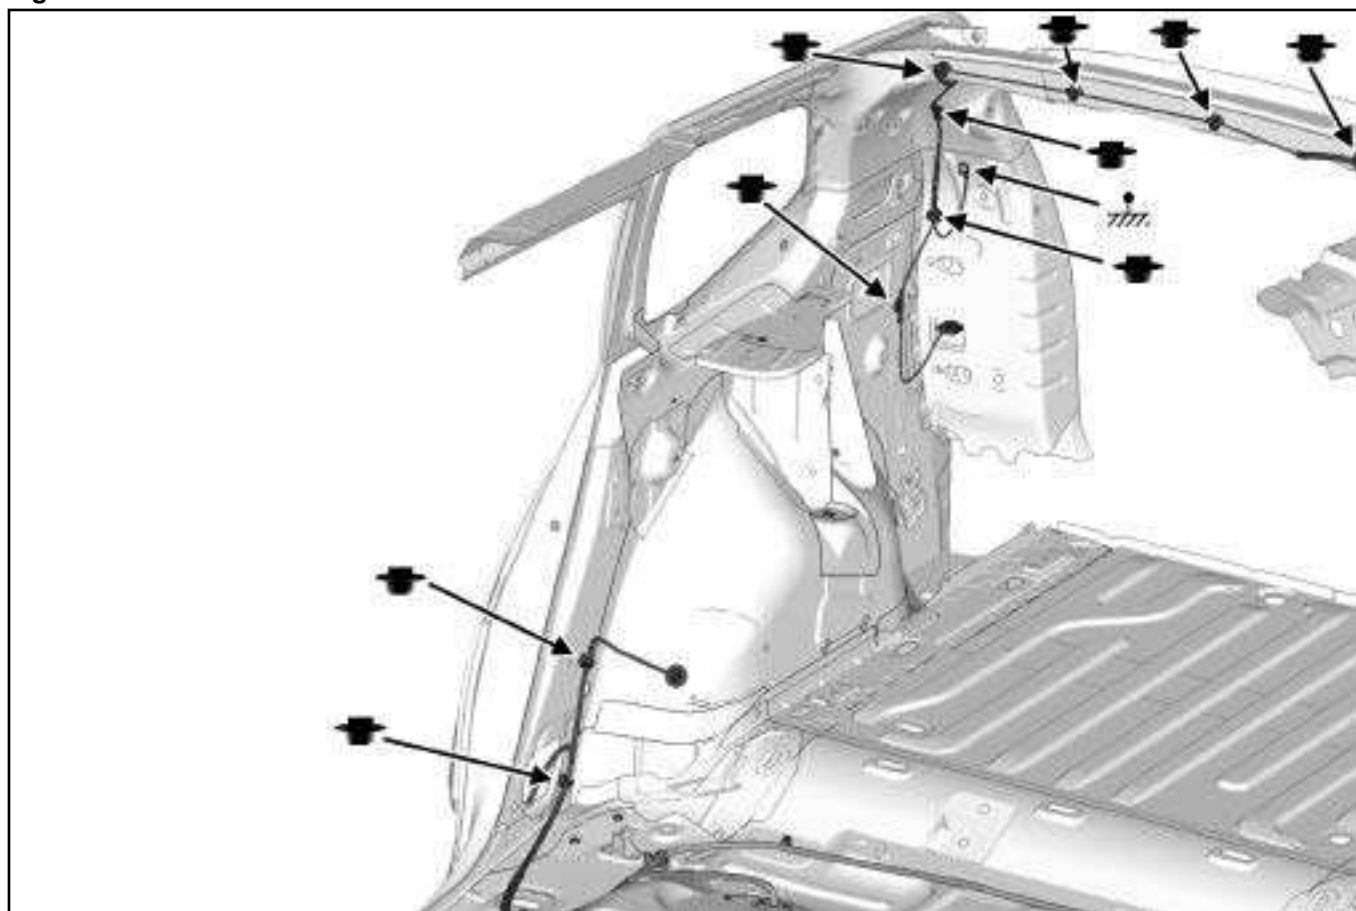

144408

- ☐ Disconnect all the connectors.
- ☐ Unclip the wiring section where indicated.
- ☐ Remove the earth terminals where indicated.
- ☐ Remove the wiring section.